QUICKFITTING HVAC

INSTALLATION INSTRUCTIONS

1 CLEAN

Cut tube at a straight angle & clean with abrasive cloth

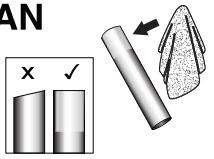

2 DEBUR

Debur the inside and outside edges of the tube

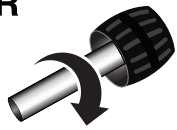

3 MARK

Mark tube with correct insertion depth

(See table below)

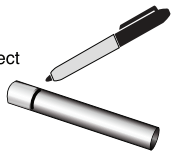

4 PREPARE

Remove and discard any yellow protective cap(s) from fittings

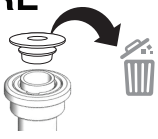

5 PUSH

Push the fitting onto tube to the marked line

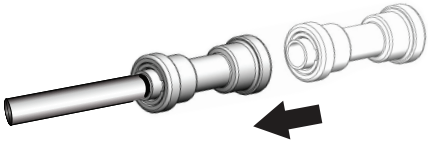

Fitting Size	Insertion Depth
1/4”	1”
3/8”	1-1/4”
1/2”	1-1/4”
5/8”	1-5/16”
3/4”	1-1/2”
7/8”	1-9/16”

Approved Refrigerants
R134A, R404A, R407A, R500, R22, R410A, R32, R407C, R290, R600A and **A2L Refrigerants:** R452B, R454B

- SINGLE USE FITTING - Removable with Slip Clip™ tool
- For HVAC/R up to 870 psi (60 bar)
- Residential & Commercial HVAC/R
- 5-Year Limited Warranty

Made in China ©2024 Distributed by QFHC • East Providence, RI 02914
www.quickfitting.com

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

QUICKFITTING®
HVAC

REMOVAL INSTRUCTIONS

1 PREPARE

Isolate or remove system charge.

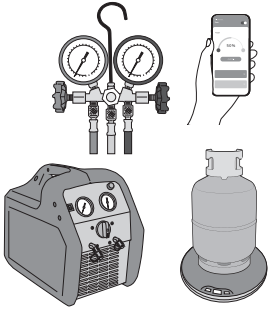

2 ALIGN

Slide the Slip Clip™ onto the fitting end per the markings on the clip.

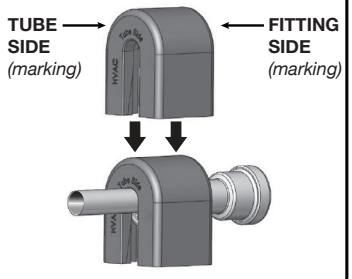

3 PULL

Pull the fitting away from the pipe to release the connection.

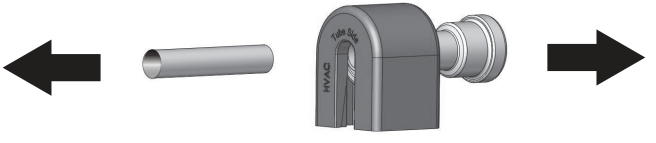

Made in China

©2024 Distributed by QFHC • East Providence, RI 02914

www.quickfitting.com

CAUTION: Fitting removal should be performed by a licensed HVAC/R professional. Improper removal may release refrigerant, oil, or system pressure, causing equipment damage, personal injury, environmental harm, or code/regulatory violations.